


1

Insert butt end of mono into tube and wedge line inside nipper base.




2

Lock line in bottom notch and wrap line around tube 5 times. Slide tag end of line through top slot and out tube end.

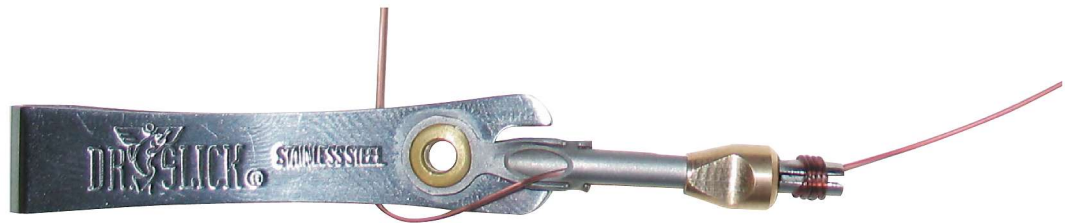

3

Insert fly line through tube.

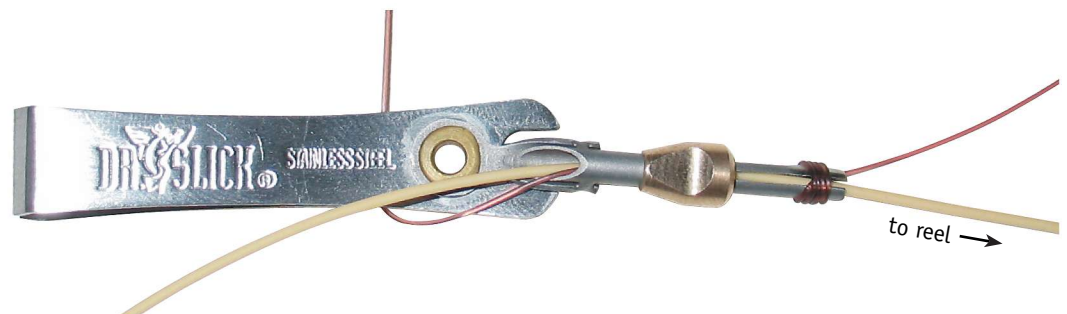

4

Use the pusher slide to push knot off end of tube while pulling on loose end of mono.

